Dual-height fifth wheel systems



Fitting dual-height fifth wheel system

The dual-height fifth wheel system is mounted directly on the mounting angles of the tractor unit. There is no need for an additional mounting plate. Further details are given in the mounting instructions.

When fitting our dual-height fifth wheel systems, JOST mounting instructions and the relevant national regulations must be observed (in Germany these are §§19, 20, 21 of the "StVZO" Motor Vehicle Safety Standards).




Closing cylinder Rocker arm Base plate

Type plate

The fifth wheel coupling is fitted with its own type plate. For further information, see the "Fifth wheel couplings" section of this catalogue

Each dual-height fifth wheel system is marked with a type designation. This can be found on the type plate attached to the sole plate. The model designation is used to identify the version of the dual-height fifth wheel system. When ordering spare parts, please quote the model designation and the factory number.

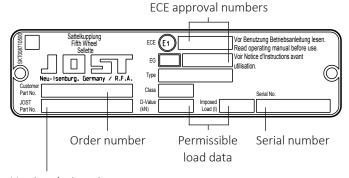

Version designation or order number